


T C R (DERBY) LTD

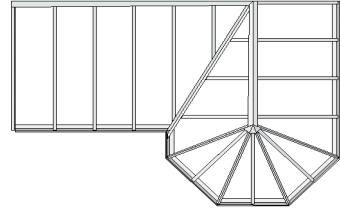

Recommendations for maintenance of polycarbonate roof sheets

Edge Sealing

To avoid dirt and internal condensation, install sheets in such a way as to permit gravity drainage. Seal the open ends after cutting and before installation with compatible impermeable anti dust tape and anti dust venting tape. Palram recommends Anti Dust venting tapes ADT25 and anti dust impermeable tape RA1025 produced by Palram.

Verify that the UV protected side of the sheet is facing out to the sun.

The polythene masking protective film must be removed immediately after installation.

Cleaning

First rinse with lukewarm water in order to remove dust particles. Then use a mild compatible soap or detergent and a cotton (not synthetic) cloth. Rinse again with water and dry with a soft cloth to avoid spotting. No abrasive cleaners should be used on the polycarbonate as this will degrade the UV stability of the sheets.

Site safety

Do not stand or walk on sheets without temporary or fixed crawling boards or ladders. These must span across a minimum of 3 roof rafters with a soft grip along the base of the board so as to grip onto the top cappings. Never use accessories or hardware manufactured from soft PVC in contact with polycarbonate products. Handle with care to avoid scratches, edge damage and puncturing – any damage to the outside sheet will cause the sheets to condensate inside the channels.

29a Great Northern Road,
Derby,
DE1 1LR

TEL: 01332 208206
FAX: 01332 208204

global
conservatory roof

Registered England 05534781